


IMPORTANT INSTRUCTIONS

For Installation of LS684, LS685, LS686, Filter Support Accessories



MODELS LS684 - LS343 Refractor Gimbal Ht Glass/filter Support
 LS685 - LS343 Refractor Gimbal Linear Spreader/filter Support
 LS686 - LS343 Refractor Gimbal Dichroic Filter/filter Support


A.C.N. 010 572 773

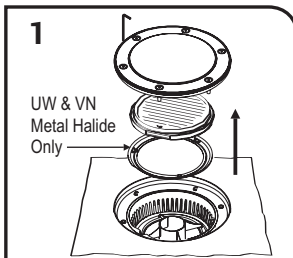

1
 UW & VN
 Metal Halide
 Only

Open fixture


Loosen screws with allen key provided. If necessary gently lever lid out with large screwdriver. Remove components as shown.

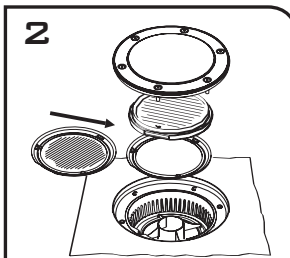

2

Replace filter assembly

Insert new filter assembly into fixture. The glass side of the assembly should be closest to the lamp

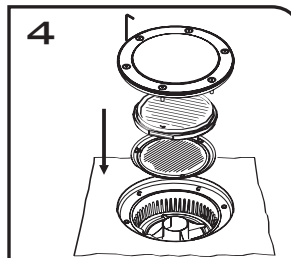


4

Replace lens and lid

Replace Filter and lens and outer cover assembly and reseal fixture.

NOTE

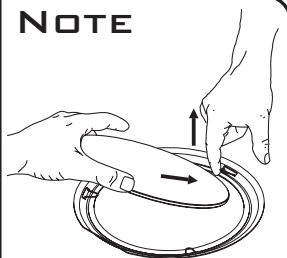


Additional filter

Additional filters, (137mm x 3mm Max) can be added to the fixture by retaining beneath spring clips on the top of the secondary glass

IMPORTANT

For Very Narrow Refractors -

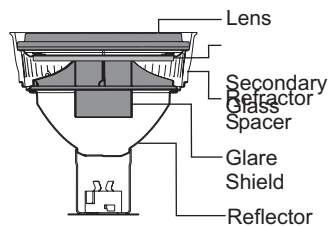

Ensure that glare shield, if supplied - VN models only, is fitted the correct way up as shown. Glare shield should seat neatly into fixture.

Intentionally Left Blank

www.lumascope.com.au

LUMASCAPE LIGHTING INDUSTRIES PTY. LTD. 38-44 Enterprise St, Cleveland, QLD Australia 4163
 PHONE - INTERNATIONAL Ph: 61 7 3286 2299 Fax: 61 7 3286 6599
 LUMASCAPE USA INC. 1300 Industrial Rd., Unit #19 San Carlos, CA 94070, USA
 Free Call: 1-866-695-LUMA(5862) Ph: 1-(650)-595-LUMA(5862) Fax: 1-(650)-595-5820

C957 - 2006_11_REV-001


IMPORTANT INSTRUCTIONS

For Installation of LS684, LS685, LS686, Filter Support Accessories



MODELS LS684 - LS343 Refractor Gimbal Ht Glass/filter Support
 LS685 - LS343 Refractor Gimbal Linear Spreader/filter Support
 LS686 - LS343 Refractor Gimbal Dichroic Filter/filter Support


A.C.N. 010 572 773

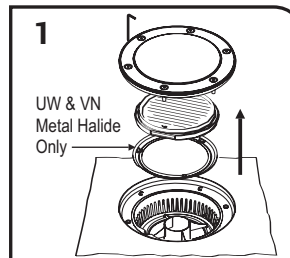

1
 UW & VN
 Metal Halide
 Only

Open fixture


Loosen screws with allen key provided. If necessary gently lever lid out with large screwdriver. Remove components as shown.

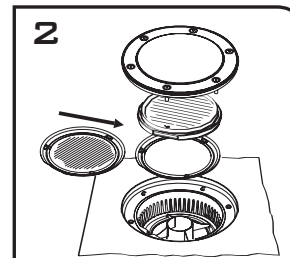

2

Replace filter assembly

Insert new filter assembly into fixture. The glass side of the assembly should be closest to the lamp

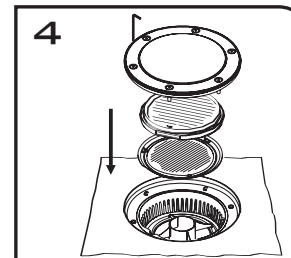


4

Replace lens and lid

Replace Filter and lens and outer cover assembly and reseal fixture.

NOTE

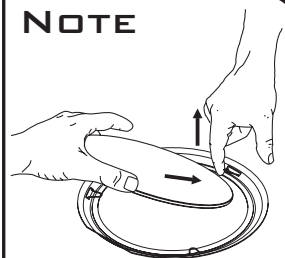


Additional filter

Additional filters, (137mm x 3mm Max) can be added to the fixture by retaining beneath spring clips on the top of the secondary glass

IMPORTANT

For Very Narrow Refractors -

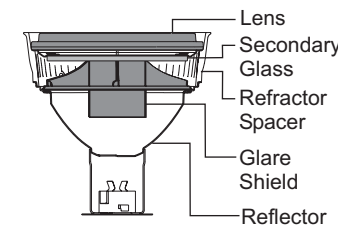

Ensure that glare shield, if supplied - VN models only, is fitted the correct way up as shown. Glare shield should seat neatly into fixture.

Intentionally Left Blank

www.lumascope.com.au

LUMASCAPE LIGHTING INDUSTRIES PTY. LTD. 38-44 Enterprise St, Cleveland, QLD Australia 4163
 PHONE - INTERNATIONAL Ph: 61 7 3286 2299 Fax: 61 7 3286 6599
 LUMASCAPE USA INC. 1300 Industrial Rd., Unit #19 San Carlos, CA 94070, USA
 Free Call: 1-866-695-LUMA(5862) Ph: 1-(650)-595-LUMA(5862) Fax: 1-(650)-595-5820

C957 - 2006_11_REV-001